


20 pcs

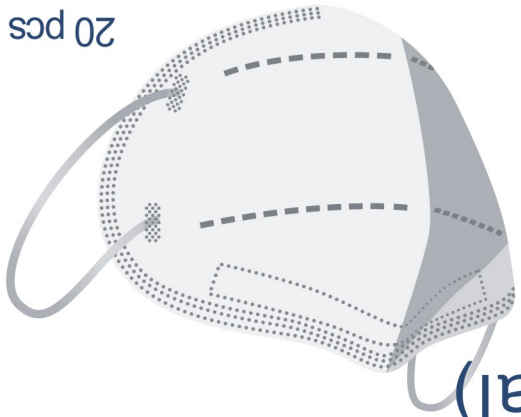

FFP2 NR Filtering half Masks (non-medical)

CE 0598
EN 149:2001+A1:2009
Lot Number: ZH20201116
MADE IN CHINA


Maximum Relative Humidity



Temperature Range




FITTING INSTRUCTION

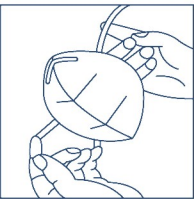


1. Gently open the mask.




2. Hold the mask in front of the face with the nose clip facing upwards.

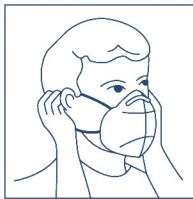

3. Attach each ear strap behind the ears.

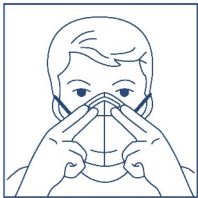

4. Press the middle of the nose clip inward to both sides until it is completely pressed into the shape of the bridge of the nose. Pinching the nose clip of the mask may affect its tightness.

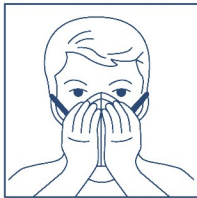

5. To check fit, cup both hands over the mask and exhale vigorously. If air flows around nose, tighten the nosepiece. If air leaks around the edge, reposition the ear band for better fit. Re-check the seal and repeat the procedure until the mask is sealed properly.



2022/04

End of shelf life

FFP2 NR



Cautions

1. This product is disposable and for single use only.
2. Failure to follow all instructions on the use of the respirator and/or failure to properly wear the complete product during all periods of exposure may adversely affect the wearer's health, lead to severe or life threatening illness, or even death.
3. Do not use in atmospheres containing less than 19.5% oxygen.
4. Discard and replace the respirator if it becomes damaged, breathing resistance becomes excessive or at the end of the shift.
5. Do not use for respiratory protection against atmospheric contaminants/concentrations which are unknown or immediately dangerous to life or health.
6. Do not alter, modify, clean or repair this respirator.
7. It is forbidden to use for those who are allergic to nonwoven fabric.
8. Keep out of reach of infants and children.
9. Before initial use, always check that the products is within the stated shelf life.



FFP2 NR Filtering half Masks (non-medical)



20 pcs

CE 0598
EN 149:2001+A1:2009
Lot Number: ZH20201116
MADE IN CHINA

FFP2 NR

Product Information

Product Name: Filtering half mask (non-medical)

Style Number : 9501A

Colour: White

Storage: Stored in the original packaging within stable conditions (check the Temperature and Humidity symbol)

Shelf Life: 2 Years

Manufacturer



Tongcheng ZhengHeng Protective
Products Co., Ltd
Tongcheng Economic Technological Development Zone
Anhui Province
China
TEL: +86 556 6606666



See information supplied
by the manufacturer